

PRODUCT CODE 5902  
SHADE CODE - 0959

# Damp Sheath Interior Advanced

SmartCare Damp Sheath Interior Advanced Primer is specially formulated acrylic copolymer based, anti damp, economy undercoat for interior surfaces which offers a standalone warranty for 3 years for anti dampness. It prevents surface dampness from manifesting itself on top coat and increases and enhances the life of top coat.

## PRODUCT BENEFITS

- Provides 3 years of standalone warranty for anti dampness (for substrates  $\leq$  40% moisture condition)
- Superior whiteness and hiding compared to a regular primer
- Increases coverage of topcoat by upto 15%




WATER BASED

**asianpaints**

**LEAD FREE GUARANTEE** 

## PRODUCT FEATURES


### AVAILABLE PACKS

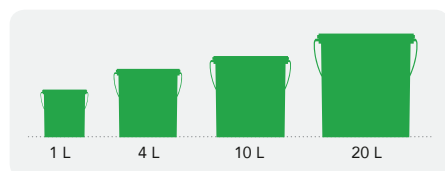

Shelf life: 60 months from the date of manufacture, when stored in original packaging under normal dry conditions.

### COLOURS AVAILABLE

**White**

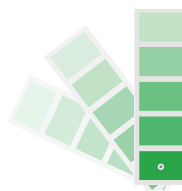

### FORCED COVERAGE



## HOW TO APPLY

### APPLICATION PROCESS

#### A. FRESH SURFACE

- Clean the surface to ensure it is free of any dirt and loose particles. Sand the surface with sandpaper 180 or use wire brush for vigorous cleaning of substrate if required and wipe it clean.
- Apply Asian Paints TruCare Interior Wall Primer (Water Thinnable) with 100% dilution at a coverage of 20 - 25 sq.m/L (1 sq.m.=10.76 sq.ft.) [Depends upon porosity of the substrate]. Let it dry for 3-4 hrs.
- Apply 2 coats of TruCare wall putty @ 1 - 1.5 sq.m./kg (1 sq.m.=10.76 sq.ft.). Allow it to dry for 4-6 hours. Sand with sand paper 180. Wipe and clean the surface with dry muslin cloth.
- Stir the contents and apply undiluted one coat of SmartCare Damp Sheath Interior Advanced with Asian Paints TruCare Interior Brush / TruCare Interior Sponge Roller 720 with a forced coverage of 9 - 10 sq.m./L (1 sq.m.=10.76 sq.ft.). Allow to dry for 3-4 hours.
- Coverage may vary on surface porosity and differential drying of the existing putty surface.
- Post drying of DSI, apply topcoats as per recommendation.

#### B. REPAINTING

- Clean the surface to ensure it is free of any dirt, black spots and loose particles. Sand the surface with sandpaper 180 or use wire brush for vigorous cleaning of substrate if required and wipe it clean.
- Stir the contents and apply undiluted one coat of SmartCare Damp Sheath Interior Advanced with Asian Paints TruCare Interior Brush / TruCare Interior Sponge Roller 720 with a forced coverage of 9 - 10 sq.m./L (1 sq.m.=10.76 sq.ft.). Allow to dry for 3-4 hours.

## Do's

- > Ensure that surface is properly cleaned and free from any loosely held plaster / powder
- > Make sure that moisture content in the surface is not more than 40%
- > Asian Paints Damp Sheath Interior Advanced is recommended to be applied by brush followed by roller for levelling
- > Do not over spread. Maintain coverage of 100 sq. ft. / L for best results

## PRECAUTIONS

- > Do not dilute SmartCare Damp Sheath Interior Advanced
- > Localized patch work application is not recommended for Damp Sheath Interior Advanced
- > Please apply on the entire surface (end to end)
- > Do not apply on existing efflorescence area
- > SmartCare Damp Sheath Interior Advanced is designed for application dampness (moisture level upto 40%) and not recommended in the presence of active water leakage / source or ground water rising scenarios. For severe dampness, active water leakage and efflorescence, please consult an APL waterproofing contractors / representative in your area

## ADDITIONAL INFORMATION

### TECHNICAL DETAIL

- **Form:** Ready to use viscous liquid
- **Drying Time:** Surface dry time 60 minutes
- **Shelf Life:** 60 months from date of manufacture in original tightly closed containers. Keep the container away from direct sunlight and excessive heat
- **Application Temperature:** Should be above 5 °C
- **Recoating time:** 4-6 hours

### SAFETY FEATURES

- Kindly refer to the MSDS for Asian Paints Damp Sheath Interior Advanced which gives detailed information on safety measures while handling the paint, which is available on request
- Store the container with the lid tightly closed in an upright position. In a cool and dry place
- Keep out of reach of children and away from eatables
- May be harmful if swallowed. In case of ingestion seek immediate medical attention
- Wear eye protection during application. In case of contact with eyes, rinse immediately with plenty of water and seek medical advice
- In case of skin contact immediately wash skin with soap and plenty of water. Get medical attention if irritation develops or persists
- It is recommended to wear suitable nose pad during sanding and surface preparation to avoid dust inhalation
- Do not pour leftover paint down the drain or in water courses
- In the event of spills, contain spillage using sand or earth
- No added Lead, Mercury or Chromium compounds