

PRODUCT CODE 0033

Royale Matt

Royale Matt is the best Matt finish available in the market today. When applied on walls, it provides a smooth matt finish with an elegant appeal.

PRODUCT BENEFITS

Smoothest Matt Finish:

Royale Matt gives a dead matt finish keeping the smoothness of a Royale finish intact

Burnish resistance:

This paint prevents walls from developing patches due to constant rubbing or cleaning

Excellent Dirt Resistance:

DPUR technology makes Royale Matt the most dirt resistance paint amongst all interior emulsions and the walls will look new for a longer period of time

Teflon® Surface Protector

Teflon® Surface Protector fortifies your walls against tough stains, increases durability and reinforces the strength of the paint film. With this quality accreditation

of Teflon, Royale Matt is comparable to the best interior emulsions across the world. Teflon® Surface Protector has enhanced stain resistance that protects your walls from all kinds of stains. The toughest household stains like turmeric and ink are reduced to a large extent whereas water-based stains such as tea, coffee, etc. are completely removed

Anti-bacterial and Anti-fungal shield:

Royale Matt is designed to prevent fungal growth on walls. It also offers a unique anti-bacterial shield to protect the walls from harboring bacteria growth that damages the walls



WATER BASED

asianpaints


LEAD FREE* GUARANTEE

* All Asian Paints products contain no added Lead, Mercury, Arsenic or Chromium from April 2008.


*Teflon® is a registered trademark of E.I. du Pont de Nemours and Company, used under license by Asian Paints Limited.

PRODUCT FEATURES

WASHABILITY

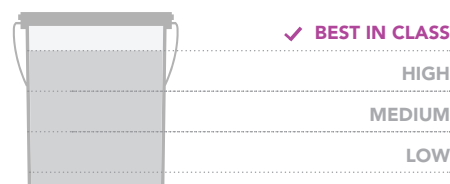

AVAILABLE PACKS

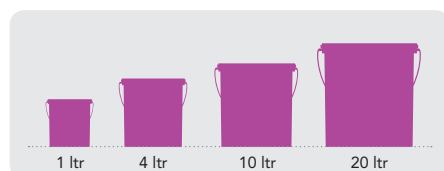


Shelf life: 3 years from date of manufacture in original tightly closed containers away from direct sunlight and excessive heat.


COLOURS AVAILABLE

1750+*

*Currently available in more than 1750 shades as per the Asian Paints Colour Spectra.

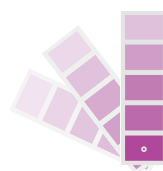


FINISH

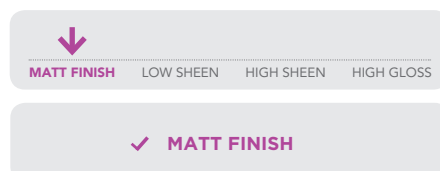

Refer to sheen levels in technical details


COVERAGE

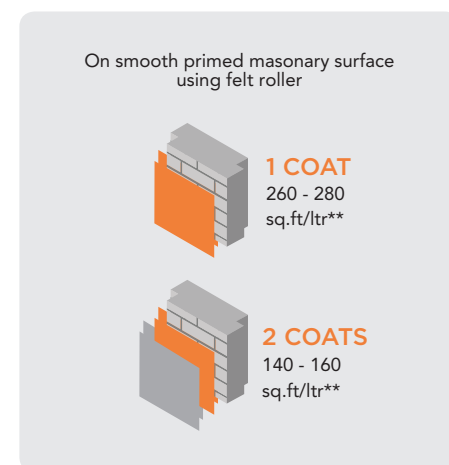

**Actual coverage may vary from the quoted coverage due to factors such as method and condition of application and surface roughness and porosity. Please purchase appropriate amount for the job.

HOW TO APPLY

PRE PAINTING STEPS

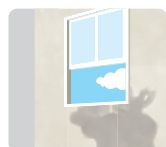

PLASTER New masonry surfaces must be allowed to cure completely. It is recommended to allow 28 days as the curing time for new masonry surfaces.



CLEANING Surface should be free from any loose paint, dust or grease. Growths of fungus, algae or moss should be removed by wire brushing and water. In case of areas having excessive dampness use Asian Paints DampBlock to limit further dampness. When the underlying surface exhibits chalkiness, in spite of thorough surface cleaning, use Asian Paints Exterior Sealer.



FILLING FOR CRACKS For filling cracks upto 3mm use Asian Paints Crack Seal.



FILLING FOR HOLES & DENTS In case of dents and holes use Asian Paints Acrylic Wall Putty or white cement and fine sand in the ratio 1:3

Royale Matt should not be applied on surfaces / substrates that are subjected to continuous seepage or dampness.

PAINT APPLICATION PROCESS

APPLICATION	CODE	THINNER	DILUTION %	APPLICATION VISCOSITY ¹	RECOATING PERIOD
STEP 1 SANDING					
SAND THE SURFACE WITH SAND PAPER 180 AND WIPE CLEAN					
ROYALE WALL BASECOAT BRUSH / ROLLER / SPRAY	0025	WATER	BRUSH / ROLLER 8 - 10 SPRAY 15 - 20 50% - 60 %	BRUSH / ROLLER 30 - 40 SPRAY 20 - 25	4 - 6 HRS
STEP 3 ACRYLIC WALL PUTTY PUTTY KNIFE	1354	WATER	BASED ON REQUIREMENT	N/A	4 - 6 HRS
STEP 4 SANDING					
SAND THE SURFACE WITH SAND PAPER 180 AND WIPE CLEAN					
STEP 5 ROYALE WALL BASECOAT BRUSH / SPRAY / ROLLER	0025	WATER	BRUSH / ROLLER 8 - 10 SPRAY 15 - 20 50% - 60 %	BRUSH / ROLLER 30 - 40 SPRAY 20 - 25	4 - 6 HRS
STEP 6 SANDING					
SAND THE SURFACE WITH SAND PAPER 320 AND WIPE CLEAN					
STEP 7 FIRST COAT ROYALE MATT ROLLER	0033	WATER	ROLLER 40 - 50	FELT ROLLER 24 - 40	4 HRS
STEP 8 SECOND COAT ROYALE MATT ROLLER	0033	WATER	ROLLER 40 - 50	FELT ROLLER 24 - 40	4 HRS

1. As measured through a Ford cup. 2. Recoat period is quoted for 30°C and 50 - 60% Relative Humidity, these may vary under different conditions. 3. Provide adequate ventilation for application and drying.

HOW TO CHOOSE COLOURS

Browse through Asian Paints colour tools to help you find the right colour combination

COLOUR SPECTRA FAN DECK*



ROYALE BOOK OF COLOURS



ROYALE SHADE CARD



*These shades are for reference only. Please refer to the Colour Spectra or Colour Palette for correct shade reference

ADDITIONAL INFORMATION

VOC CONTENT



Low VOC*
No Harmful Chemicals"

*VOCs are less than 50 g/L.
Colorants may add additional VOCs
*No intentionally added CMRs,
Heavy Metals or APEOs

Royale Matt does not contain carcinogens,
mutagens, or reproductive toxins.
Any trace contaminants are less than
0.01% by weight.

POST PAINTING CARE

- The Golden rule for removing any wall stains is that one should remove it immediately.
- Remove all dirt using a clean cloth or duster. Always remove dirt from top to bottom, this helps in avoiding loose dirt to smudge the walls.
- For regular household stains like pencil, tea, coffee, crayons etc, use 5% soap/ detergent solution. Use a sponge to remove the stains.
- In case of tough stains like turmeric, sketch pen, use a mild detergent solution (e.g Pril, Vim Liquid etc) for cleaning the stains.

TECHNICAL DETAILS

- a. **Drying time:** Surface dry time 30 min
- b. **Sheen levels:** < 5 at 60 deg GH
- c. **Flash point IS101/1987 Part 1, Sec 6:** >90° C
- d. **Stability of thinned paint:** To be used within 24 hours

PRECAUTIONS

- Do not apply when ambient temperature is less than 10°C or if the temperature might drop to this level within 4 hrs of application.
- Do not apply when humidity is greater than 90%. It may cause prolonged drying time of paint and moisture condensation on the walls.
- Do not over-thin or over-extend the brush.
- Tint using Asian Paints machine colourants only
- Stir well and strain before use.
- Tinted paints need thorough shaking immediately after tinter addition as well as before use.
- For best performance ensure that the surface is dry. On moisture meter it should be under the green zone. In case it is in Red zone, find out the source of water and address it before painting.
- For better washability ensure the paint surface is cured for 2 weeks under normal atmospheric conditions. (30° C. ; 50 - 60 %RH)
- **Application of Acrylic Wall Putty and adherence to the painting system will lead to best results.**

SAFETY FEATURES

- Kindly refer to the MSDS for Asian Paints Royale Matt which gives detailed information on safety measures while handling the paint, which is available on request.
- Store the container with the lid tightly closed in an upright position, in a cool, dry place.
- Keep out of reach of children and away from eatables.
- May be harmful if swallowed. In case of ingestion seek immediate medical attention.
- Wear eye protection during application. In case of contact with eyes, rinse immediately with plenty of water and seek medical advice.
- In case of skin contact immediately wash skin with soap and plenty of water. Get medical attention if irritation develops or persists.
- Do not breathe vapour or spray. It is recommended to wear suitable nose pad during sanding and surface preparation to avoid dust inhalation
- **Left-Over Paint Disposal:** Left-over paint/drums should not be disposed in soil / drains. Consumers should consult a local recycling agency for proper disposal of paint/drums.