

# TRACTOR


RANGE OF FINISHES

- Affordable Emulsions, Enamel and Primers
- 2000+ Shades
- Matt and Shyne options
- Smooth and Washable finish


Scan for the digital shade card



PATTERNS • MATERIALS • STENCILS

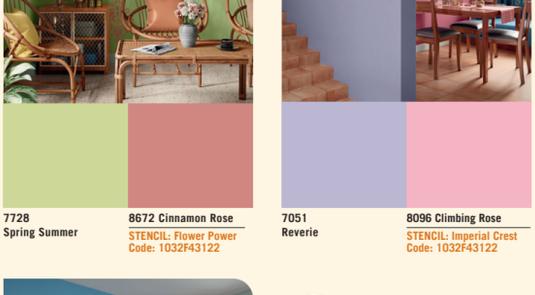

Shade: 7767 Harvest Season  
 Royale Play Blue Curacao 7360 TC1: EMPHASIC 7357  
 Royale Play Habitat 7720 TC1: EMPHASIC 7357

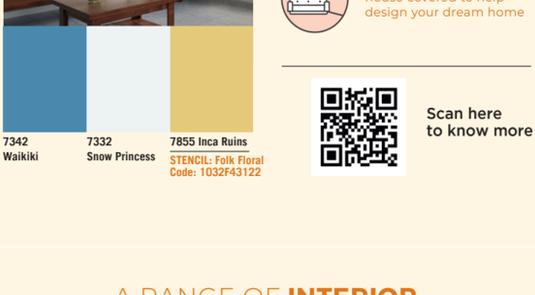

ROYALE PLAY TOP COAT  
 ROYALE PLAY METALLICS TOP COAT

## GRIHAKALA, A GUIDE TO MAKE YOUR HOME BEAUTIFUL



7728 Spring Summer  
 8672 Cinnamon Rose STENCIL: Flower Power Code: 1032F43122  
 7051 Reverie  
 8096 Climbing Rose STENCIL: Imperial Crest Code: 1032F43122




Decor book with a wide range of colour combinations

Combinations of stencils and texture finishes for wall highlight

Various sections of the house covered to help design your dream home

7342 Waikiki  
 7332 Snow Princess  
 7855 Inca Ruins STENCIL: Folk Floral Code: 1032F43122



Scan here to know more

## A RANGE OF INTERIOR PAINTS JUST FOR YOUR HOME!

PARAMETER	UNO	TRACTOR AQUALOCK	TRACTOR SPARC	TRACTOR EMULSION	TRACTOR EMULSION SHYNE
Smoothness	★★	★★★	★★★★	★★★★★	★★★★★
Durability	1-2 years	1-2 years	2-3 years	3-4 years	3-4 years
Benefits	Lasts longer than ordinary distemper Acrylic Distemper	Provides twice the water resistance as compared to ordinary distempers	Smooth finish Bright Shades Higher coverage than regular distemper Best in class washability	Smooth finish 3-4 years durability Best in class washability Anti-shade fade	Soft finish 3-4 years durability Best in class washability Anti-shade fade
Shade Range	900+ shades	1200+ shades	1000+ shades	2200+ shades	1200+ shades
Coverage (Sq. M.)	5.5-7.4/KG	7.8-10.6/Kg	11-13/L	12-14/L	12-14/L
Finish	Matt	Matt	Matt	Matt	Sheen

## GIVE A TWIST TO YOUR DECOR WITH ROYALE PLAY WALL FASHION STENCILS



### FOR BEST RESULTS!



**PREPARING THE WALL SURFACE**  
 1. Clean: Use emery paper 180 to remove loose particles.  
 2. Priming: Apply 1 coat of Asian Paints Tractor Sparc Interior Primer (ST/WT).  
 3. Smoother: Fill dents with thin coats of Asian Paints Trucare Acrylic Wall Putty. Allow it to dry for 4-6 hours.  
 4. Priming: Apply another coat of Asian Paints Sparc Interior Primer (ST/WT).

**TRACTOR EMULSION / TRACTOR SPARC**  
 1. Mix 500-700 ml of water to 1 litre of Tractor Emulsion/Tractor Sparc  
 2. Apply 2-3 coats of Tractor Emulsion/Tractor Sparc with 4-6 hours between each coat.

**TRACTOR AQUALOCK / UNO**  
 1. Mix 600-650 ml of water to 1 kg of Tractor Uno Acrylic Distemper or Tractor Aqualock.  
 2. Apply 2-3 coats of Tractor Emulsion with 4-6 hours between each coat.

**PREPARING METAL/ WOODEN SURFACES**  
 1. Clean: Sand it with emery paper 180.  
 2. Priming: For metal surfaces, apply 1 coat of Asian Paints Trucare Yellow Metal Primer and for wooden surfaces, apply a coat of Asian Paints Trucare Wood Primer at recommended dilutions. Allow it to dry for 6-8 hours.  
 3. Smoother: Apply Asian Paints Knifing Paste Filler on the surface. After 6-8 hours of drying, sand the puttied surface with emery paper.  
 4. Priming: Apply 2<sup>nd</sup> coat of appropriate primer and smoothen the surface by sanding with emery paper 320.

**TRACTOR ENAMEL / TRACTOR SPARC ENAMEL**  
 1. Apply 2 coats of Tractor Enamel/Tractor Sparc Enamel as the final top coat at a dilution of 8-10% with mineral turpentine oil by volume, preferably with an intercoat interval of 10-12 hours.

## WORLD OF TRACTOR



www.asianpaints.com | CALL US: 18002095678 FREE SAMPLE, NOT FOR SALE  
 MARKETED BY: Asian Paints Ltd. 6A, Shantinagar, Santacruz (E), Mumbai-400055  
 PRINTED BY: Spectra Colourtech India Pvt. Ltd, Mumbai

SPACE FOR DEALER STAMP

## YELLOWS & ORANGES



## PINKS/REDS & PURPLES



## BLUES/GREENS & TEALS



## WHITES & NEUTRALS



### TRACTOR UNO DIRECT SHADES



### TRACTOR SPARC ENAMEL DIRECT SHADES



## FINISHES

### REGULAR (MATT)



### SHEEN



Ivy League 7585



Visualize colour on your walls with Asian Paints App

